OLYMPUS

Quick Start Guide
Stylus 1000

Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

© 2006 OLYMPUS IMAGING CORP.
Printed in Japan

1AG6P1P3252-- VH705401

1 Gather these items (box contents)

Digital Camera

Strap

LI-12B Lithium Ion Battery


LI-10C Battery Charger

USB Cable

AV Cable

OLYMPUS Master Software CD-ROM

Items not shown: Advanced Manual (CD-ROM), Basic Manual, and warranty card. Contents may vary depending on purchase location.

Attach the strap

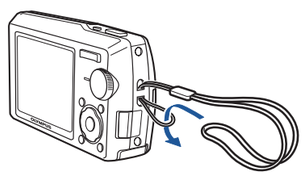

● Pull the strap tight so that it does not come loose.

2 Prepare the battery

a. Charge the battery

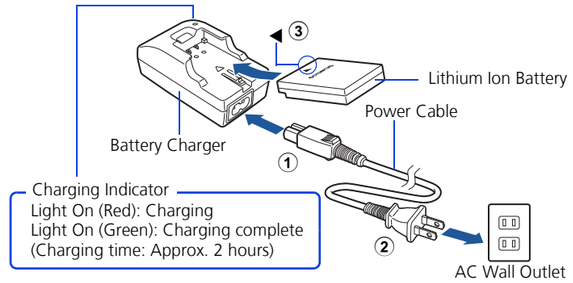

● Battery comes partially charged.

b. Insert the battery in the camera

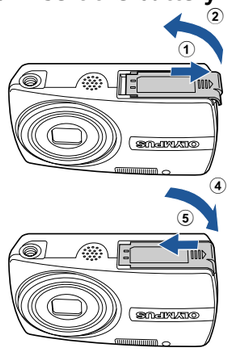

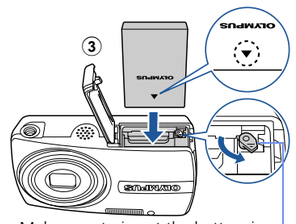

• Make sure to insert the battery in the direction of the ▼ symbol until locked in place.

Battery lock knob

• To remove the battery, slide the battery lock knob in the direction of the arrow.

● For details on inserting an optional xD-Picture Card™, please refer to the advanced manual.

3 Turn the camera on

This explains how to turn on the camera in shooting mode.

a. Set the mode dial to 📷.

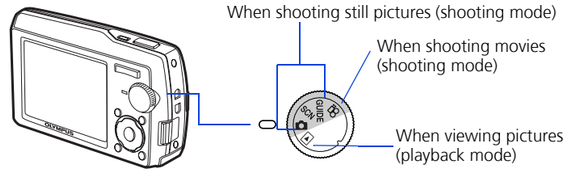

Still picture shooting modes

📷	This function allows you to shoot with the camera's automatic settings.
SCN	This function allows you to shoot pictures by selecting a scene according to the shooting condition.
GUIDE	This function allows you to set the target items by following the shooting guide displayed on the screen.

b. Press the POWER button

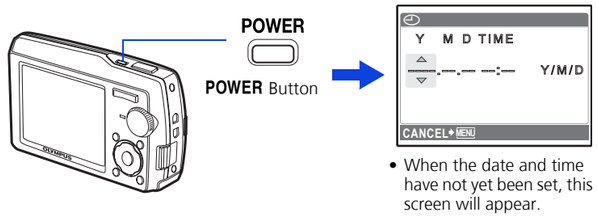

• When the date and time have not yet been set, this screen will appear.

● To turn off the camera, press the **POWER** button once again.

Hint

The directions of the arrow pad (△▽◁▷) is indicated with △▽◁▷ in the supplied instruction manual.



4 Set date and time

About the date and time setting screen

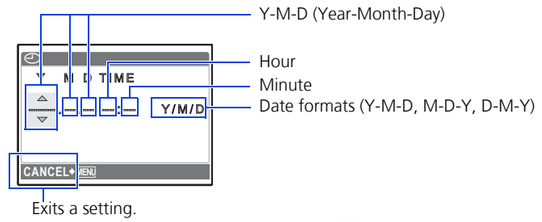

a. Press the △ button and the ▽ button to select [Y].

• The first two digits of the year are fixed.

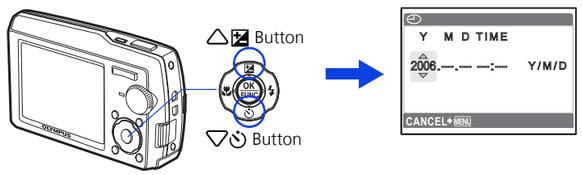

b. Press the ▷ button.

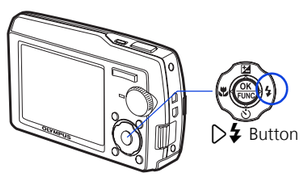

c. Press the △ button and the ▽ button to select [M].

d. Press the ▷ button.

e. Press the △ button and the ▽ button to select [D].

f. Press the ▷ button.

g. Press the △ button and the ▽ button to select "hour", "minute".

• The time is displayed in the 24-hour format.

h. Press the ▷ button.

i. Press the △ button and the ▽ button to select [Y/M/D].

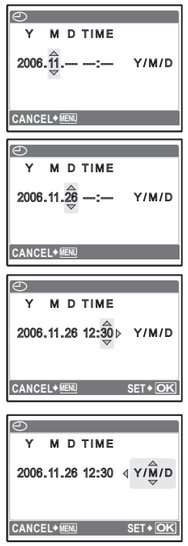

j. After all items have been set, press the OK button.

• For precise time setting, press the OK button as the time signal strikes 00 seconds.

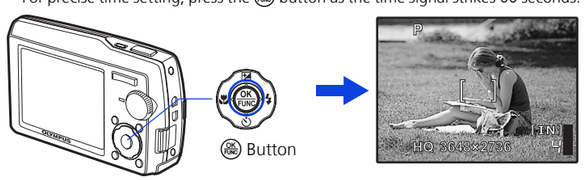

5 Take a picture

a. Hold the camera

b. Focus

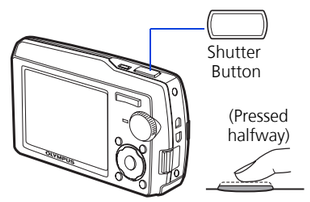

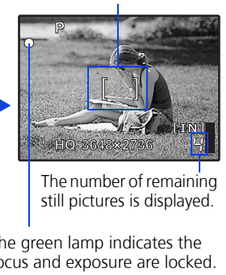
Place this mark over your subject.
HQ 304×2736
The number of remaining still pictures is displayed.
The green lamp indicates the focus and exposure are locked.

c. Shoot

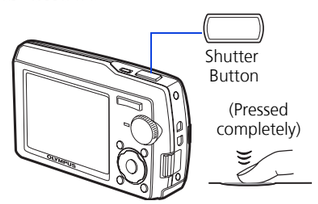

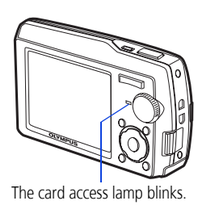

6 Review your pictures

a. Set the mode dial to ▶.

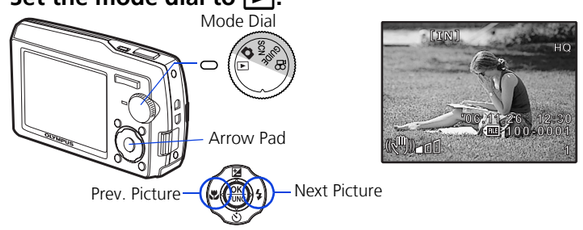

Erase pictures

a. As described in a. above, display the picture you want to erase.

b. Press the 🗑 button.

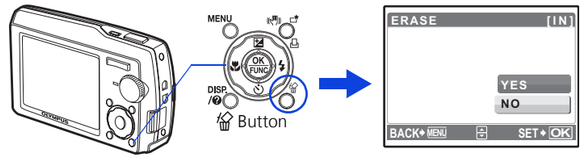

c. Press the △ button to select [YES] and press the OK button to erase the image.